 
 


## To Start the Control Panel:

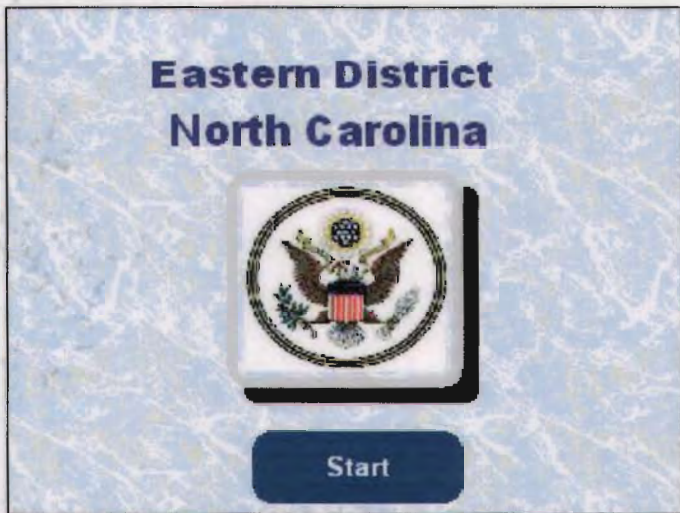

Touch the screen anywhere to initiate the system. The **Main Page** appears when the system is on.

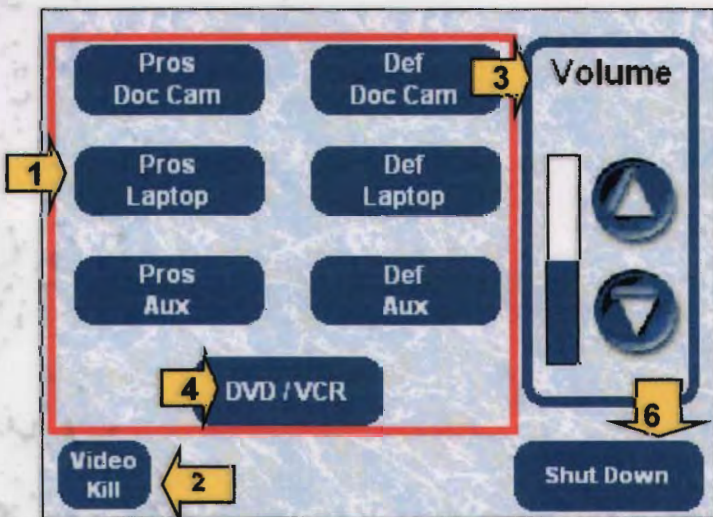

**(1) Select Source:** Allows the user to select which source will be seen and heard throughout the courtroom. When a source is selected, the button will turn **green**.

Sources to choose from are:

- Prosecutor Document Camera
- Defendant Document Camera
- Prosecutor Laptop
- Defendant Laptop
- Prosecutor Auxiliary Input
- Defendant Auxiliary Input

**(2) Video Kill:** Turns off the monitor in the Jury box. The button will turn **green** when activated. To turn the monitor back on, press the **Video Kill** button again.

**(3) Volume:** Adjusts the sound level in the room.

## Volume:

 


Selecting the **Up** button increases the volume level in the courtroom. The button turns **green** as the volume increases.



Selecting the **Down** button decreases the volume level in the courtroom. The button turns **green** as the volume decreases.

## DVD/VCR

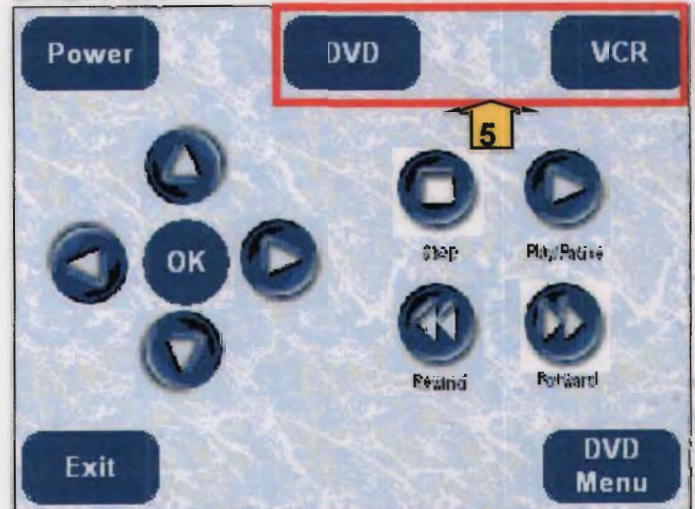


**(4) DVD/VCR:** Opens up the control screen for the DVD/VCR player.

**(5) Select Device:** Select **DVD** or **VCR** to control that specific device.

- **Power:** Turns the DVD or VCR player on and off.
- **DVD Menu:** Displays DVD on-screen menu for configuration of function settings (when the DVD is the selected device).
- **Arrows:** Provide navigation through DVD menu.
- **OK:** Confirms settings in menu.
- **Stop:** Stops playback of the inserted media.
- **Play:** Begins playback of the inserted media.
- **Pause:** Pauses playback until the button is pressed again.
- **Rewind:** Begins backward scanning of the inserted media.
- **Forward:** Begins backward scanning of the inserted media.
- **Exit:** Returns to the main page.

### Shut Down:

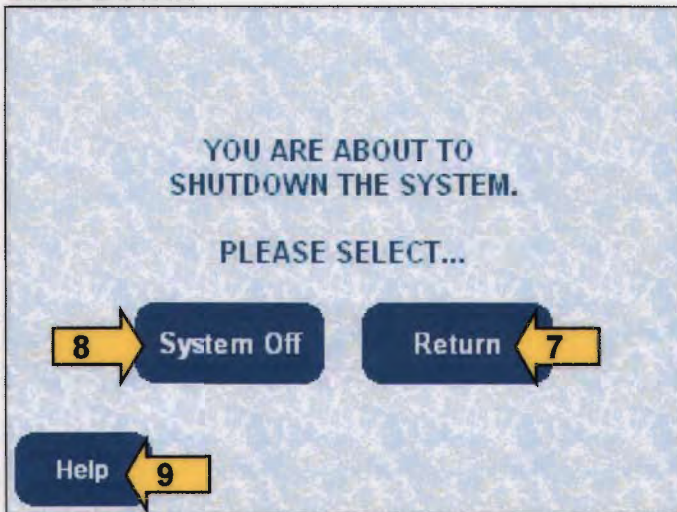

**(6) Shut Down:** Begins to turn the system off. A confirmation screen will appear to verify the user's intent to mute all system devices.

**(7) Return:** Returns to the **Main Page** without turning the system off.

**(8) System Off:** Turns off system components and returns to the Greeting Screen.

# System Inputs

## 5.4 Video Annotation



A Boeckeler Pointmaker PVI-X90DR video annotation device is available at the witness location. The user is provided with an Elo 1529-L LCD flat screen monitor with touch-enabled annotation capabilities. By touching the LCD screen, the user is able to enter graphical testimony into the evidence presentation system.

By touching the screen with a finger or stylus, the user can create freehand drawings. Tapping on the screen places an annotation mark on the image.


The calibration screen and initial settings of the annotation system should only be accessed for service matters.

**Clear Markers:** Touching the lower left corner of the screen restarts annotation, clears all entries and erases all markings on the screen.

**Undo/Erase:** Touching the upper right corner of the screen erases the most recent entry.

**Change Color:** Touching the upper left corner of the screen changes the color of the markers, cycling through seven (7) colors.

**Draw/PC Toggle:** Will switch between drawing and controlling a connected PC using the PVI-PC20 Software.

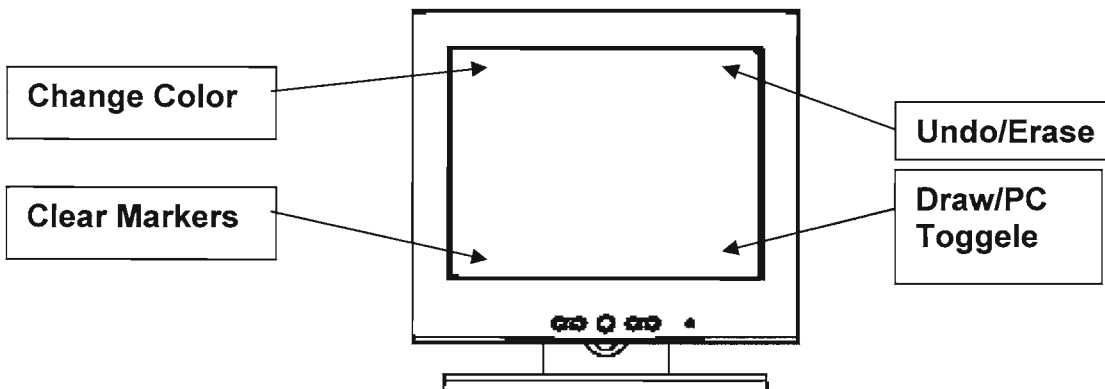

## 5.5 Auxiliary Video Inputs

Auxiliary video inputs have been supplied and marked VIDEO for video input and S-VIDEO for S-video input. Additional video devices such as laptops can be connected at these inputs.